


คู่มือการติดตั้งก๊อกอ่างล้างหน้าเซรามิคควาล์ว

BF-238-1

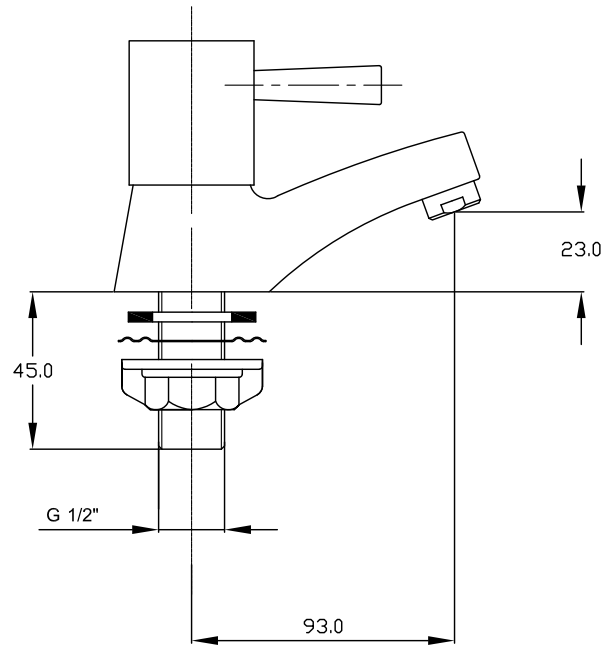

ปริมาณน้ำสูงสุดไม่เกิน 6 ลิตร/นาที/1 บาร์

หน่วย : มม.



คู่มือการติดตั้งก๊อกอ่างล้างหน้าเซรามิคควาล์ว

การตรวจสอบก่อนการติดตั้ง

1. ตรวจสอบสภาพ และความถูกต้องของอุปกรณ์ประกอบชุดก่อนทำการติดตั้ง
2. ทำการล้างเศษผง ทราย และสิ่งสกปรกที่ค้างภายในท่อน้ำประปา ด้วยการเปิดน้ำประปาไล่สิ่งสกปรกต่างๆในท่อน้ำประปาจนสะอาด ก่อนทำการติดตั้ง

การติดตั้ง

1. วัดให้ตัวก๊อกอยู่ในแนวตรงขนานตลิ่งให้แน่น และต่อสายน้ำเข้ากับขาออก และควรติดตั้ง STOP VALVE ที่ผนังด้านใต้ 1 ตัว เพื่อความสะดวกในการบำรุงรักษา และใช้งาน
2. หลังการติดตั้ง ควรทดสอบการใช้งานโดย เปิด-ปิดดูรอยรั่วตามข้อต่อต่างๆ



ระบบเซรามิคควาล์ว
CERAMIC VALVE CARTRIDGE

รับประกัน 5 ปี
5 YEARS WARRANTY

การดูแลและรักษาอุปกรณ์

1. ห้ามใช้น้ำยาล้างห้องน้ำที่มีส่วนผสมของกรดไฮโดรคลอริกในการทำความสะอาดอุปกรณ์ประกอบชุดนี้
2. ห้ามใช้แปรงขนแข็ง ฟอยล์ขัดหรือผงซักฟอก ในการทำความสะอาด เพราะจะทำให้เกิดรอยที่ผิวชุดโครมหรือฟองน้ำนุ่มๆ เช็ดทำความสะอาด
3. ควรใช้น้ำยาหรือครีมขัดผิวโครมเยี่ยมโดยเฉพาะ
4. การถอด-ใส่อุปกรณ์ต่างๆควรใช้ผ้าห่อรองประแจหรือคีมล็อคเพื่อป้องกันรอยจากการขัน

ปัญหาที่อาจเกิดขึ้นกับสุขภัณฑ์

ปัญหา	สาเหตุ	วิธีแก้ไข
ปิดน้ำไม่อยู่	ชุดเปิด-ปิดน้ำเซรามิคควาล์วชำรุด	ถอดชุดหัวก๊อกออก และเปลี่ยนชุดเปิด-ปิดน้ำ
น้ำไหลไม่เรียบ	ปากกรองน้ำอุดตัน	ถอดปากกรองออกทำความสะอาดและประกอบกลับตามเดิม

การติดตั้งก๊อกน้ำคุณภาพสูง ควรติดตั้งโดยช่างผู้ชำนาญงาน ต้องการคำแนะนำเพิ่มเติม ติดต่อแผนกบริการหลังการขาย โทร. 0-2338-1229-31 ต่อ 146,147




N.L.SANITARY FITTINGS CO.,LTD.

103 หมู่ 2 ถ.เทพารักษ์ ต.บางเสาธง อ.บางเสาธง จ.สมุทรปราการ 10540
TEL : 0-2338-1229-31,0-2338-1571,0-2338-1693 FAX. :0-2338-1228



INSTALLATION MANUAL OF BASIN CERAMIC VALVE FAUCET

BF-238-1

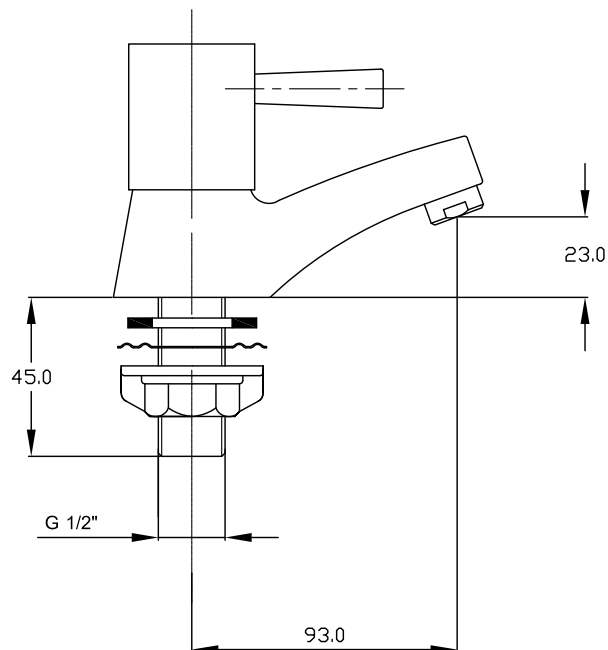

Maximum Flow Rate 6 L/Min./1 Bar

Unit : mm.


INSTALLATION MANUAL OF BASIN CERAMIC VALVE FAUCET

Prior to Installation

1. Make sure that equipment and tools are proper working condition.
2. Before installation, clean out dirt or other impurities which may have collected in water pipe by allowing water to flow freely for a moment.

Installation introduce

1. Set faucet perpendicular. Lighten nut and connect two inlet hose to main pipe faucet inlets. A stop valve should be fitted to each inlet of faucet for maintenance.
2. After installation, should be test the assembly by opening and closing the faucet allowing to flow 2 or 3 times and check the leaking of joint

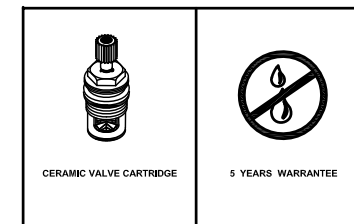

Care and Maintenance

1. Don't use toilet cleaners with HCl content.
2. Don't use hard brush, steel wood or detergent for cleaning because of will have scratch marks. Should be use soft cloth or sponge for cleaning to prevent scratch marks.
3. Should be use the special metal/ chromium cleaning cream.
4. When tools are required to grip faucet, should be use thick cloth to prevent scratch marks.

Problems that may occur with the faucet

Problems	Cause	Solution
Can't close valve	The ceramic cartridge damaged	Remove the faucet's head And changing the ceramic cartridge
Turbulent flow	Clogged aerator	Remove the aerator for clean and reassembly.

High Quality faucets installation should be install by technician. For more information, please contact technical service section (department). Tel. : 0-2338-1229-31 Ext 146,147