


คู่มือการติดตั้งก๊อกซิงค์เคาน์เตอร์เซรามิคควาล์วแป๊ป J

SF-106J

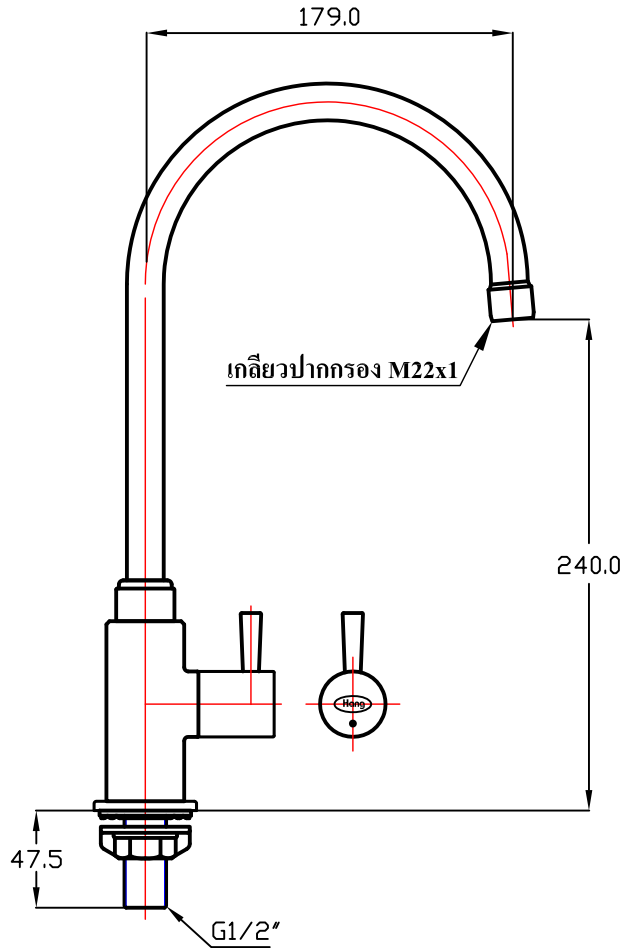

(ปริมาณน้ำ 0.5-6.0 ลิตร / นาที / 1บาร์)

Unit : mm.

คู่มือการติดตั้งก๊อกซิงค์เคาน์เตอร์เซรามิคควาล์วแป๊ป J

การตรวจสอบก่อนการติดตั้ง

1. ตรวจสอบสภาพ และความถูกต้องของอุปกรณ์ ประกอบสุขภัณฑ์ก่อนทำการติดตั้ง
2. ทำการล้างเศษผง ทราย และสิ่งสกปรกที่ค้างภายในท่อน้ำประปา ด้วยการเปิดน้ำประปาไล่สิ่งสกปรกต่างๆในท่อน้ำประปาจนสะอาด ก่อนทำการติดตั้ง

การติดตั้ง

1. ประกอบเข้ากับอ่างซิงค์ตรงตำแหน่งที่เดินท่อไว้
2. หลังการติดตั้ง ควรทดสอบการใช้งานโดย เปิด-ปิด ดูรอยรั่วตามข้อต่อต่างๆ

ปัญหาที่อาจเกิดขึ้นกับสุขภัณฑ์

ปัญหา	สาเหตุ	วิธีแก้ไข
ปิดน้ำไม่อยู่	ชุดเปิด-ปิดน้ำเซรามิคควาล์วชำรุด	ถอดชุดหัวก๊อกออก และเปลี่ยนชุดเปิด-ปิดน้ำ
น้ำไหลไม่เรียบ	ปากกรองน้ำอุดตัน	ถอดปากกรองออกทำความสะอาดและประกอบกลับตามเดิม
หัวก๊อกน้ำหลวม	สกรูยึดหัวก๊อก	ถอดแค็ปก๊อกออกแล้วขันสกรูยึดหัวก๊อกให้แน่นประกอบแค็ปก๊อกตามเดิม

การติดตั้งก๊อกน้ำคุณภาพสูง ควรติดตั้งโดยช่างผู้ชำนาญงาน ต้องการคำแนะนำเพิ่มเติม ติดต่อแผนกบริการหลังการขาย โทร. 0-2338-1229-31 ต่อ 146,147




N.L.SANITARY FITTINGS CO.,LTD.

103 หมู่ 2 ถ.เทพารักษ์ ต.บางเสาธง อ.บางเสาธง จ.สมุทรปราการ 10540
TEL. : 0-2338-1229-31,0-2338-1571,0-2338-1693 FAX. :0-2338-1228

INSTALLATION MANUAL OF DECK MOUNT SINK FAUCET WITH "J" SPOUT

SF-106J

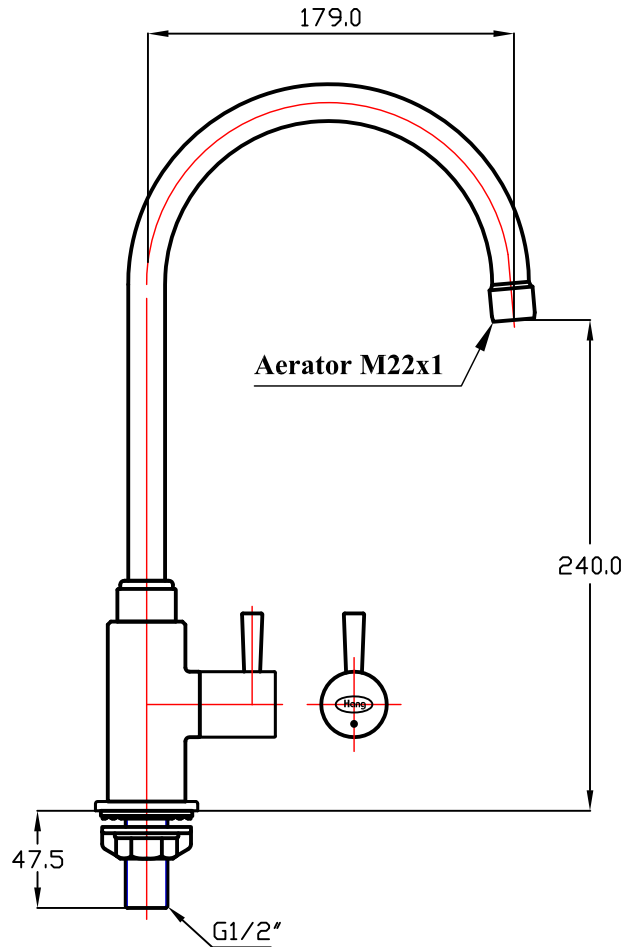

(Flow Rate 0.5-6.0 L / MIN / 1BAR)

Unit : mm.



INSTALLATION MANUAL OF DECK MOUNT SINK FAUCET WITH "J" SPOUT

Prior to Installation

1. Make sure that equipment and tools are proper working condition.
2. Before installation, clean out dirt or other impurities which may have collected in water pipe by allowing water to flow freely for a moment.

Installation introduce

1. Place the faucet, marking sure that it is perpendicular to the pipe of wall.
2. After installation, should be test the assembly by opening and closing the faucet allowing to flow 2 or 3 times and check the leaking of joint

Problems that may occur with the faucet


Problems	Cause	Solution
Can't close valve	The ceramic cartridge damaged	Remove the faucet's head And changing the ceramic cartridge
Turbulent flow	Clogged aerator	Remove the aerator for clean and reassembly.
Lose faucet-head	Lose head-holding screw	Remove the cap and lighten screw , reassembly cap.

High Quality faucets installation should be install by technician. For more information, please contact technical service section (department). Tel. : 0-2338-1229-31 Ext 146,147



N.L.SANITARY FITTINGS CO.,LTD.

SANITARY FITTING CO.,LTD.
103 Moo.2, Tearak Rd., Tambol Bangsaothong, Amphur Bangsaothong, Samutprakarn, 10540
TEL. : 0-2338-1229-31,0-2338-1571,0-2338-1693 FAX. :0-2338-1228

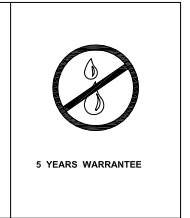

CERAMIC VALVE CARTRIDGE

5 YEARS WARRANTEE

Care and Maintenance

1. Don't use toilet cleaners with HCl content.
2. Don't use hard brush, steel wood or detergent for cleaning because of will have scratch marks. Should be use soft cloth or sponge for cleaning to prevent scratch marks.
3. Should be use the special metal/ chromium cleaning cream.
4. When tools are required to grip faucet, should be use thick cloth to prevent scratch marks.

